

PROPRIETARY: EXCEPT AS OTHERWISE AGREED IN WRITING, THE INFORMATION AND DESIGN DISCLOSED HEREIN ARE THE PROPERTY OF THE VMC GROUP AND MUST NOT BE COPIED OR DISTRIBUTED OUTSIDE THE VMC GROUP EXCEPT TO AUTHORIZED PERSONS WITH A GENUINE NEED TO KNOW WHO BY THE USE HEREOF ACKNOWLEDGE THE VMC GROUP'S OWNERSHIP AND AGREE TO MAINTAIN THIS INFORMATION AND DESIGN IN STRICT CONFIDENCE.

120R-101751 REV.: 7		REV.	DESCRIPTION	DATE	BY
READ INSTRUCTIONS IN THEIR ENTIRETY BEFORE BEGINNING.					
 LOCATE ISOLATORS UNDER EQUIPMENT AFTER DETERMINING POSITIONS DESIGNATED IN THE VMC GROUP SUBMITTAL, SHEET 1. ALL LIMIT BOLTS ARE FACTORY SET AND BONDED IN PLACE. THE SHIPPING NUT ON THE LIMIT BOLT MUST BE LOWERED UNTIL IT TOUCHES THE BOLT HEAD. THE NUT WAS SHIPPED I THE RAISED POSITION. DO NOT ATTEMPT TO READJUST THE LIMIT BOLTS. FACTORY SETTING ASSURES UNIFORM BOLT LOADING IF UPLIFT OCCURS, AS IN THE CASE OF A COOLING TOWER BEING DRAINED. THE VMC GROUP RECOMMENDS BOLTING ALL ISOLATORS TO FLAT SURFACE. WHEN A WEIGHT CHANGE OCCURS IN EXCES OF 20% OF EQUIPMENT OPERATING WEIGHT, THE ISOLATOR BASE PLATE MUST BE BOLTED. STYLE "A" TOP PLATE MUST E USED WITH A WIDE FLANGE BEAM BOLTED TO TOP PLATE AS SHOWN ON SUBMITTAL DRAWING. WHEN THE APPLICATION IS OUTDOORS AND THE EQUIPMENT WILL BE SUBJECT TO HIGH WINDS, THE OWNER'S REPRESENTATIVE MUST EVALUATE ANCHOR TYPE AND SIZE TO EFFECTIVELY RESIST WIND FORCES. TYPE ME ISOLATOR ARE NOT SUITABLE FOR SEISMIC APPLICATIONS. USE VMC GROUP TYPE MS ISOLATORS TO ISOLATE EQUIPMENT THAT WILL BE SUBJECT TO SEISMIC APPLICATIONS. USE YMC GROUP TYPE MS ISOLATOR IS POSITIONED UNDER EQUIPMENT. THE ADJUSTMENT PROCESS CAN ONLY BEGIN AFTER FULL OPERATING WHEN ISOLATOR IS POSITIONED UNDER EQUIPMENT. THE ADJUSTMENT PROCESS CAN ONLY BEGIN AFTER FULL OPERATING WEIGHT IS REACHED. THE ADJUSTMENTS CAN B MADE BY STARTING AT ANY ISOLATOR AND TURNING THE ADJUSTING PROCESS UNTIL ONE ISOLATOR JUST RISES OFF THE SHIMS. STOP ADJUSTMENT ON THAT AND OTHER ISOLATORS AS THEY RISE OFF SHIMS APPORVIMATELY 1/32". WHEN ALL ISOLATORS HAVE RISEN ABOVE THE SHIMS. THE ADJUSTING PROCESS INTIL ONE ISOLATOR JUST RISES OFF THE SHIMS. STOP ADJUSTMENT ON THAT AND OTHER ADJUSTING PROCESS INTIL ONE ISOLATOR JUST RISES OFF THE SHIMS. STOP ADJUSTMENT ON THAT AND OTHER ADJUSTING PROCESS IN EVENTIALATION IS NOT NORMALI REQUIRED. THE VMC GROUP SUGGESTS A SEMIANNUAL INSPECTION OF THE COMPONENTS FOR POSSIBLE CORNOSION PROBLEMS. IF PROBLEMS ARE OBSERVED, 	N REMOVABLE ADJUSTING BOLT A B B B B B B B B B B B B B B B B B B		ADJUSTING NUT REMOVA STEELS SHIPPIN LIMIT-ST	HIM G BOLT OP BOLT HOLE	OR SUPERIOR
CERTIFIED FOR: JOB NAME: CUSTOMER : CUSTOMER P.O.: SALES ORDER:	MODEL ME-2R 4200-8350 SPRING ISOLATORS WI INTERNAL ADJUSTMEI 2 INCH DEFLECTION	TH NT	THE VMC GROUP SKALE : The Power of Together SHEET: Bloomingdale, NJ 07403 DRAWING NO.:	- '''' - ''' '	REVISION

PROPRIETARY: EXCEPT AS OTHERWISE AGREED IN WRITING, THE INFORMATION AND DESIGN DISCLOSED HEREIN ARE THE PROPERTY OF THE VMC GROUP AND MUST NOT BE COPIED OR DISTRIBUTED OUTSIDE THE VMC GROUP EXCEPT TO AUTHORIZED PERSONS WITH A GENUINE NEED TO KNOW WHO BY THE USE HEREOF ACKNOWLEDGE THE VMC GROUP'S OWNERSHIP AND AGREE TO MAINTAIN THIS INFORMATION AND DESIGN IN STRICT CONFIDENCE.