


REV. DESCRIPTION DATE BY

TYPE AMSR-2D-SB SEISMICALLY RESTRAINED SPRING VIBRATION ISOLATORS WITH SHIPPING BLOCK						
	RATED LOAD RATED SPRING		SPRING	ALLOWABLE G RATING ²		
MODEL	(LBS)	DEFLECTION (IN)	RATE (LB/IN)	COLOR CODE	HORIZONTAL	VERTICAL
AMSR-2D-75-SB	75	2.42	31	WHITE	18.7	24.7
AMSR-2D-160-SB	160	2.29	70	YELLOW	8.8	11.6
AMSR-2D-230-SB	230	2.30	100	GREEN	6.1	8.0
AMSR-2D-355-SB	355	2.15	165	DK BROWN	3.9	5.2
AMSR-2D-435-SB	435	1.89	230	RED	3.2	4.3
AMSR-2D-600N1-SB	600	1.88	319	RED/ BLACK	2.3	3.1
AMSR-2D-725-SB	725	1.61	450	TAN	1.9	2.6
AMSR-2D-845-SB	845	1.48	570	PINK	1.7	2.2
AMSR-2D-1000N ¹ -SB	1000	1.52	659	PINK/ BLACK	1.4	1.9
AMSR-2D-1320N ¹ -SB	1320	1.42	927	PINK/GRAY	1.1	1.4
AMSR-2D-1435N ³ -SB	1435	1.43	1002	PINK/GRAY/ ORANGE	1.0	1.3
AMSR-2D-1640N ³ -SB	1640	1.54	1067	PINK/GRAY/ DK BROWN	0.88	1.1

TABLE NOTES:

- . TWO NESTED SPRINGS YIELD THIS LOAD. THE COLOR CODE INDICATED IS FOR OUTER SPRING/ INNER SPRING.
- 2. ALL ALLOWABLE G RATINGS ARE BASED ON HILTI KWIKBOLT TZ WEDGE ANCHORS (OR EQUAL) IN STONE AND A GGREGATE. CONCRETE (Fc=3000 PSI)
- 3. THREE NESTED SPRINGS YIELD THIS LOAD.

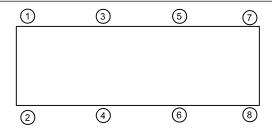

ISOLATOR SELECTIONS			
LOC 1:	LOC 2:		
LOC 3:	LOC 4:		
LOC 5:	LOC 6:		
LOC 7:	LOC 8:		
CUSTOMER EQP'T. TAG:			

NOTE: MATERIAL SHOWN IS FOR (1) SET.

3. INNER NESTED SPRING, WHEN USED, NOT SHOWN. SEE TABLE NOTES 1 AND 3.

4. ALL SPRINGS DESIGNED WITH 50% OVER-TRAVEL.

5. REFER TO TABLE ABOVE FOR ALLOWABLE HORIZONTAL AND VERTICAL G RATINGS. SEE TABLE NOTE 2.

PRIOR TO MOUNTING EQUIPMENT, THE INTERNAL VERTICAL RESTRAINT WILL BE AGAINST THE HOUSING TOP PLATE AND THE ADJUSTING NUT WILL BE 1/4" ABOVE THE BLOCK AT THE "FREE HEIGHT." WHEN THE EQUIPMENT IS MOUNTED, THE SPRING WILL DEPRESS AND REST ON THE SHIM AT THE "OPERATING HEIGHT."

7. RATED DEFLECTIONS ARE WITHIN 25% OF NOMINAL. HIGHER DEFLECTIONS ARE ALLOWED IF THEY MEET SPECIFICATIONS.

OTHER MATERIALS, COMPOUNDS,	OR FINISHES W	ITH EQUAL	OR SUPERIOF
PROPERTIES MAY BE SUBSTITUTE	D AS THEY BECO	OME AVAIL A	RIF

CERTIFIED FOR:			
JOB NAME:			
CUSTOMER:			
CUSTOMER P.O.:			
SALES ORDER:			

MODEL AMSR-2D-SB 75-1640 LBS. SEISMIC ISOLATORS WITH SHIPPING BLOCK 2 INCH DEFLECTION

THE VMC GROU

SCALE: NONE SHEET:

The Power of Together Bloomingdale, NJ 07403 Houston, TX 77041

DRAWING NO.:

REVISION

 180R-102214
 REV.
 DESCRIPTION
 DATE
 BY


READ INSTRUCTIONS IN THEIR ENTIRETY BEFORE BEGINNING.

FACTORY INSTRUCTIONS

- 1. ISOLATORS ARE SHIPPED FULLY ASSEMBLED AND ARE TO BE SPACED AND ARRANGED IN ACCORDANCE WITH INSTALLATION DRAWINGS OR AS OTHERWISE RECOMMENDED.
- 2. SET ISOLATORS ON FLOOR OR SUB-BASE, ENSURING THAT ALL ISOLATOR CENTERLINES MATCH THE EQUIPMENT MOUNTING HOLES OR SPACE AND ARRANGE ISOLATORS IN ACCORDANCE WITH THE INSTALLATION DRAWING. SHIM OR GROUT AS REQUIRED LEVELING ALL ISOLATOR BASE PLATES AT THE SAME ELEVATION (1/4" MAXIMUM DIFFERENCE IN ELEVATION CAN BE TOLERATED). ISOLATOR BASE MUST REST ON A FLAT SURFACE.
- 3. PRIOR TO ANCHORING THE BASEPLATE, THE ISOLATOR HOUSING MAY BE ELEVATED SLIGHTLY ABOVE THE FINISHED FLOOR. ANCHOR DOWN ISOLATORS USING BASE PLATE THRU HOLES "H". PULL DOWN ISOLATOR HOUSING USING ANCHOR BOLTS UNTIL ISOLATOR BASE PLATE "E" IS FIRMLY AGAINST THE FLOOR. THIS WILL PRELOAD THE SPRING WITHIN THE HOUSING AND PUSH THE INTERNAL STOP "A" AGAINST THE HOUSING TOP PLATE.
- 4. PRIOR TO MOUNTING EQUIPMENT, INTERNAL STOP "A" WILL BE AGAINST THE TOP PLATE AND WASHER "F" WILL BE APPROXIMATELY 1/4" ABOVE THE SHIPPING BLOCK AT THE "FREE HEIGHT."
- 5. REMOVE SHIPPING BOLT, BUT LEAVE THE SHIPPING BLOCK IN PLACE.
- 6. REMOVE EQUIPMENT ATTACHMENT NUT "B" ON ISOLATOR STUD "C" AND PLACE EQUIPMENT ON ISOLATOR WASHER "F". THE EQUIPMENT WEIGHT WILL COMPRESS THE SPRING INSIDE THE HOUSING AND EQUIPMENT BRACKET WILL REST ON THE SHIPPING BLOCK AT THE "OPERATING HEIGHT."
- 7. TURN THE ADJUSTING NUT "D" UNDER THE WASHER COUNTER-CLOCKWISE TO COMPRESS THE SPRING. WHEN THE LOAD IS EQUALIZED, TURNING THE NUT WILL RAISE THE EQUIPMENT UNTIL THE INTERNAL GAP "G-1" IS APPROXIMATELY EQUAL TO THE EXTERNAL GAP "G-2". (I.E. THE EQUIPMENT CAN MOVE UP OR DOWN. THE SAME DISTANCE IN A SEISMIC EVENT).
- 8. THE ADJUSTING PROCESS SHOULD BE DONE GRADUALLY ON ALL ISOLATORS UNTIL THE EQUIPMENT WEIGHT IS NO LONGER RESTING ON THE SHIPPING BLOCKS.
- 9. REPLACE ISOLATOR ATTACHMENT NUTS "B" ON ADJUSTING BOLTS "C" TO SECURE MACHINE LEGS TO ISOLATORS. HAND TIGHTEN WHERE THERE IS FIRM CONTACT BETWEEN THE NUT AND EQUIPMENT. (HAND TOOLS MAY BE USED.) THEN TIGHTEN THE NUT AN ADDITIONAL 1/3 TURN. REPLACE SHIPPING BOLT AND HAND HAND-TIGHTEN WHERE THERE IS FIRM CONTACT BETWEEN THE BOLT AND EQUIPMENT BRACKET. TOOLS MAY BE USED TO BRING THE BOLT AND METAL COMPONENTS INTO CONTACT. FOLLOWING CONTACT. TIGHTEN THE BOLT ANOTHER 1/3 TURN.

FIELD INSTRUCTIONS

- SHIPPING BLOCK FIXES THE EQUIPMENT AT THE OPERATING HEIGHT. AFTER EQUIPMENT IS
 INSTALLED AT ITS FINAL LOCATION, REMOVE SHIPPING BOLT. IF THE BLOCK WILL NOT SLIDE OUT,
 TURN ADJUSTING NUT COUNTER-CLOCKWISE UNTIL EQUIPMENT DEAD LOAD IS NO LONGER
 RESTING ON SHIPPING BLOCK. REMOVE SHIPPING BLOCK AND DISCARD.
- 2. THRUST RESTRAINTS MUST BE ADDED TO THE FAN IF THE TOTAL FAN STATIC PRESSURE IS 2" W.G. OR GREATER.

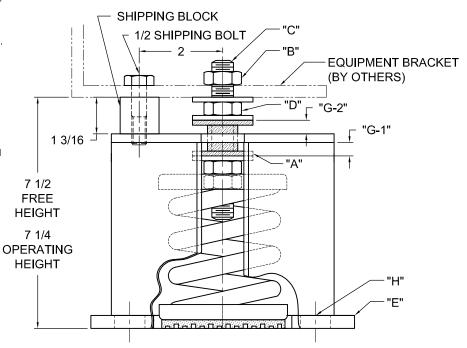

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE.

REVISION

NONE

SHEET

DRAWING NO.:

CERTIFIED FOR:		
JOB NAME:	MODEL AMSR-2D-SB 75-1640 LBS.	
CUSTOMER:	SEISMIC ISOLATORS	
	WITH SHIPPING BLOCK	THE VMC GROL
CUSTOMER P.O.:	2 INCH DEFLECTION	The Power of Together
SALES ORDER:		Bloomingdale, NJ 0740