


REV.	DESCRIPTION	DATE	BY	

TYPE AMSR-2E-2B SEISMICALLY RESTRAINED SPRING VIBRATION ISOLATORS WITH SHIPPING BLOCK						
MODEL	RATED LOAD	RATED DEFLECTION	SPRING RATE	SPRING COLOR CODE	ALLOWABLI	E G RATING <sup>2</sup>
MODEL	(LBS)	(IN)	(LB/IN)		HORIZONTAL	VERTICAL
AMSR-2E-80-SB	80	2.00	40	BLACK	17.5	23.1
AMSR-2E-150-SB	150	2.00	75	GREEN	9.3	12.3
AMSR-2E-300-SB	300	2.00	150	DK YELLOW	4.7	6.2
AMSR-2E-500-SB	500	2.00	250	BLUE	2.8	3.7
AMSR-2E-1000-SB	1000	2.00	500	TAN	1.4	1.9
AMSR-2E-1400-SB	1400	1.87	750	RED	1.0	1.3
AMSR-2E-1600N <sup>1</sup> -SB	1600	2.13	750	TAN/RED	0.9	1.2
AMSR-2E-1800-SB	1800	1.71	1050	DK GRAY	0.8	1.0
AMSR-2E-2050-SB	2050	1.64	1250	DK BLUE	0.7	0.9
AMSR-2E-2250N <sup>1</sup> -SB	2250	1.62	1388	DK BLUE/BLACK	0.6	0.8
AMSR-2E-2460N <sup>1</sup> -SB	2460	1.64	1500	DK BLUE/RED	0.6	0.8
AMSR-2E-2700N <sup>1</sup> -SB	2700	1.64	1650	DK BLUE/ DK GREEN	0.5	0.7

## TABLE NOTES:

- 1. TWO NESTED SPRINGS YIELD THIS LOAD.
- 2. ALL ALLOWABLE G RATINGS ARE BASED ON HILTI KWIKBOLT TZ WEDGE ANCHORS (OR EQUAL) IN STONE AND AGGREGATE CONCRETE (FC=3000 PSI).
- RATED LOAD OF ISOLATOR IS STAMPED ON SPRING ASSEMBLY BASE PLATE.

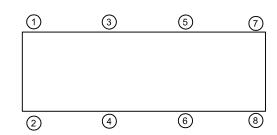

ISOLATOR SELECTIONS			
LOC 1:	LOC 2:		
LOC 3:	LOC 4:		
LOC 5:	LOC 6:		
LOC 7:	LOC 8:		
CUSTOMER EQP'T. TAG:			

NOTE: MATERIAL SHOWN IS FOR (1) SET.

1.	ALL DIMENSIONS ARE IN INCHES. INTERPRET PER ANSI Y-14.
2.	FINISH: HOUSING- ONE COAT BLACK PAINT, SPRING- BLACK PAINT, HARDWARE- ZINC ELECTI

TROPLATE.

RIBBED ELASTOMERIC PAD  $^{\perp}$ 

- 3. INNER NESTED SPRING, WHEN USED, NOT SHOWN. SEE SPRING TABLE, NOTE 1.
- 4. ALL SPRINGS DESIGNED WITH 50% OVER-TRAVEL.

1 3/16 그

<u>∕</u>7∕8 7/16 FREE HEIGHT

8 3/16

**OPERATING** 

**HEIGHT** 

NOTES

- 5. REFER TO TABLE ABOVE FOR ALLOWABLE HORIZONTAL AND VERTICAL G RATINGS. SEE TABLE NOTE 2.
- ISOLATOR HAS BEEN FACTORY PRE-COMPRESSED A NOMINAL 1/2 INCHES.

The prior to mounting equipment, the internal vertical restraint will be against the housing top plate and the adjusting NUT WILL BE 1/4" ABOVE THE BLOCK AT THE "FREE HEIGHT." WHEN THE EQUIPMENT IS MOUNTED, THE SPRING WILL DEPRESS AND REST ON THE SHIM AT THE "OPERATING HEIGHT."

PLATE WELDED

-SPRING

TOP AND BOTTOM

8. RATED DEFLECTIONS ARE WITHIN 25% OF NOMINAL. HIGHER DEFLECTIONS ARE ALLOWED IF THEY MEET SPECIFICATIONS.

OTHER MATERIALS, COMPOUNDS,	OR FINISHES WITH EQUAL OR SUPERIOR
ROPERTIES MAY BE SUBSTITUTE	D AS THEY RECOME AVAILABLE

CERTIFIED FOR:
JOB NAME:
CUSTOMER:
CUSTOMER P.O.:
SALES ORDER:

MODEL AMSR-2E-SB 80-2700 LBS. SEISMIC ISOLATORS WITH SHIPPING BLOCK 2 INCH DEFLECTION

Y
THE VMC GROUP

Houston, TX 77041

NONE SHEET:

SCALE:

The Power of Together Bloomingdale, NJ 07403

DRAWING NO.:

REVISION

 180R-102215
 REV.: 3
 DESCRIPTION
 DATE
 BY


## READ INSTRUCTIONS IN THEIR ENTIRETY BEFORE BEGINNING.

## **FACTORY INSTRUCTIONS**

- 1. ISOLATORS ARE SHIPPED FULLY ASSEMBLED AND ARE TO BE SPACED AND ARRANGED IN ACCORDANCE WITH INSTALLATION DRAWINGS OR AS OTHERWISE RECOMMENDED.
- 2. SET ISOLATORS ON FLOOR OR SUB-BASE, ENSURING THAT ALL ISOLATOR CENTERLINES MATCH THE EQUIPMENT MOUNTING HOLES OR SPACE AND ARRANGE ISOLATORS IN ACCORDANCE WITH THE INSTALLATION DRAWING. SHIM OR GROUT AS REQUIRED LEVELING ALL ISOLATOR BASE PLATES AT THE SAME ELEVATION (1/4" MAXIMUM DIFFERENCE IN ELEVATION CAN BE TOLERATED). ISOLATOR BASE MUST REST ON A FLAT SURFACE.
- 3. PRIOR TO MOUNTING EQUIPMENT, INTERNAL STOP "A" WILL BE AGAINST THE TOP PLATE AND WASHER "F" WILL BE APPROXIMATELY 1/4" ABOVE THE SHIPPING BLOCK AT THE "FREE HEIGHT."
- 4. REMOVE SHIPPING BOLT, BUT LEAVE THE SHIPPING BLOCK IN PLACE.
- 5. REMOVE EQUIPMENT ATTACHMENT NUT "B" ON ISOLATOR STUD "C" AND PLACE EQUIPMENT ON ISOLATOR WASHER "F". THE EQUIPMENT WEIGHT WILL COMPRESS THE SPRING INSIDE THE HOUSING AND EQUIPMENT BRACKET WILL REST ON THE SHIPPING BLOCK AT THE "OPERATING HEIGHT."
- 6. TURN THE ADJUSTING NUT "D" UNDER THE WASHER COUNTER-CLOCKWISE TO COMPRESS THE SPRING. WHEN THE LOAD IS EQUALIZED, TURNING THE NUT WILL RAISE THE EQUIPMENT UNTIL THE INTERNAL GAP "G-1" IS APPROXIMATELY EQUAL TO THE EXTERNAL GAP "G-2". (I.E. THE EQUIPMENT CAN MOVE UP OR DOWN, THE SAME DISTANCE IN A SEISMIC EVENT).
- 7. THE ADJUSTING PROCESS SHOULD BE DONE GRADUALLY ON ALL ISOLATORS UNTIL THE EQUIPMENT WEIGHT IS NO LONGER RESTING ON THE SHIPPING BLOCKS.
- 8. REPLACE ISOLATOR ATTACHMENT NUTS "B" ON ADJUSTING BOLTS "C" TO SECURE MACHINE LEGS TO ISOLATORS. HAND TIGHTEN WHERE THERE IS FIRM CONTACT BETWEEN THE NUT AND EQUIPMENT. (HAND TOOLS MAY BE USED.) THEN TIGHTEN THE NUT AN ADDITIONAL 1/3 TURN. REPLACE SHIPPING BOLT AND HAND-TIGHTEN WHERE THERE IS FIRM CONTACT BETWEEN THE BOLT AND EQUIPMENT BRACKET. TOOLS MAY BE USED TO BRING THE BOLT AND METAL COMPONENTS INTO CONTACT. FOLLOWING CONTACT, TIGHTEN THE BOLT ANOTHER 1/3 TURN.

## FIELD INSTRUCTIONS

- 1. SHIPPING BLOCK FIXES THE EQUIPMENT AT THE OPERATING HEIGHT. AFTER EQUIPMENT IS INSTALLED AT ITS FINAL LOCATION, REMOVE SHIPPING BOLT. IF THE BLOCK WILL NOT SLIDE OUT, TURN ADJUSTING NUT COUNTER-CLOCKWISE UNTIL EQUIPMENT DEAD LOAD IS NO LONGER RESTING ON SHIPPING BLOCK. REMOVE SHIPPING BLOCK AND DISCARD.
- 2. THRUST RESTRAINTS MUST BE ADDED TO THE FAN IF THE TOTAL FAN STATIC PRESSURE IS 2" W.G. OR GREATER.

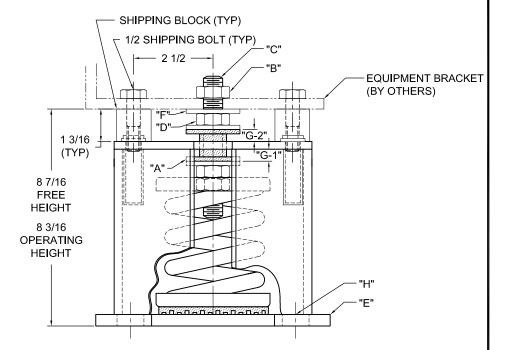

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE.

CERTIFIED FOR:			SCALE : NONE		
JOB NAME:	MODEL AMSR-2E-SB 80-2700 LBS.		SHEET:	Memb	
CUSTOMER:	SEISMIC ISOLATORS WITH SHIPPING BLOCK				
CUSTOMER P.O.:	2 INCH DEFLECTION	THE VMC GROUP The Power of Together	DRAWING NO.:		REVISION
SALES ORDER:	2	Bloomingdale, NJ 07403 Houston, TX 77041			