11 1/2

11 1/4

11 1/4

13/16 DIA HOLE FOR ATTACHMENT TO CONCRETE (4 TYP)

(BASE PLATE)
3/4 DIA HOLE FOR ATTACHMENT TO STEEL (4 TYP)

MODEL M2SS-1E SEI	EL M2SS-1E SEISMICALLY RESTRAINED VIBRATION ISOLATOR FOR 1" DEFLECTION				
SEISMIC MOUNT SIZE	RATED LOAD (LBS)	RATED DEFLECTION (IN)	SPRING RATE (LBS/IN)	COLOR CODE	
M2SS-1E-1650NM	1650	1.07	1538	RED/ DK. BLUE	
M2SS-1E-2000M	2000	1.00	2000	TAN	
M2SS-1E-3400NM	3400	1.10	3100	PINK/ DK. BLUE	
M2SS-1E-4000M	4000	1.11	3600	WHITE	

1.11

1.11

1.04

4626

5364

6250

DESCRIPTION

REV.

M2SS-1E-5150NM

M2SS-1E-5980NM


DATE

WHITE/ DK. PURPLE


WHITE/ DK. GREEN

WHITE/ GRAY

BY

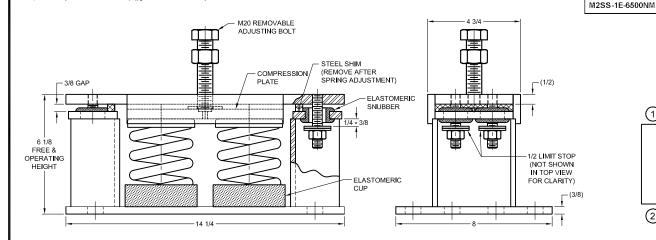

(VIEW CUT AWAY FOR CLARITY)

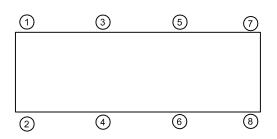

## NOTES:

172R-102933 REV.: 4

- 1. ALL DIMENSIONS ARE IN INCHES, INTERPRET PER ANSI Y14.
- 2. STANDARD FINISH: HOUSING POWDER COAT (COLOR:BLACK), SPRING POWDER COAT (COLOR: SEE TABLE), HARDWARE ZINC-ELECTROPLATE.
- 3. EQUIPMENT MUST BE BOLTED OR WELDED TO THE TOP PLATE TO MEET ALLOWABLE SEISMIC RATINGS.
- 4. ISOLATOR BASE PLATE MUST BE ANCHORED TO CONCRETE WITH (4) 3/4 DIA ANCHORS.
- 5. ALL SPRINGS ARE DESIGNED FOR 50% OVERLOAD CAPACITY.
- 6. REFER TO SHEET 2 OF 2 FOR INSTALLATION INSTRUCTIONS.
- 7. RATED DEFLECTIONS ARE WITHIN 25% OF NOMINAL. HIGHER DEFLECTIONS ARE ALLOWED IF THEY MEET SPECIFICATIONS.

ISOLATOR SELECTIONS				
LOC 1:	LOC 2:			
_OC 3:	LOC 4:			
_OC 5:	LOC 6:			
_OC 7:	LOC 8:			
CUSTOMER EQP'T. TAG:				

NOTE: MATERIAL SHOWN IS FOR (1) SET.

5150

5980

6500

OTHER MATERIALS, COMPOUNDS, OR FINISHES WITH EQUAL OR SUPERIOR PROPERTIES MAY BE SUBSTITUTED AS THEY BECOME AVAILABLE.

CERTIFIED FOR:		
JOB NAME:		
CUSTOMER:		
CUSTOMER P.O.:		
SALES ORDER:		

MODEL M2SS-1E-M 1650-6500 LBS.
VIBRATION ISOLATOR
WITH INTEGRAL SEISMIC RESTRAINT
AND METRIC EXTERNAL ADJUSTMENT
1 INCH DEFLECTION

_		SCALE:
		NONE
		SHEET:
	THE VMC GROUP	DRAWING NO.:
	The Power of Together	
	Bloomingdale, NJ 07403	
	Houston, TX 77041	

NONE Member

172R-102933 REV.: 4

## 1. READ INSTRUCTIONS IN THEIR ENTIRETY BEFORE BEGINNING INSTALLATION.

- ISOLATORS ARE SHIPPED FULLY ASSEMBLED AND ARE TO BE POSITIONED IN ACCORDANCE WITH THE SUBMITTAL DRAWINGS OR AS OTHERWISE RECOMMENDED.
- 3. SET ISOLATORS ON FLOOR, HOUSEKEEPING PAD, OR SUB-BASE, ENSURING THAT ALL ISOLATOR CENTERLINES MATCH THE EQUIPMENT MOUNTING HOLES. THE VMC GROUP RECOMMENDS THAT THE ISOLATOR BASE PLATES ("B") BE INSTALLED ON A LEVEL SURFACE. SHIM OR GROUT AS REQUIRED, LEVELING ALL ISOLATOR BASE PLATES AT THE SAME ELEVATION (1/4-INCH MAXIMUM DIFFERENCE CAN BE TOLERATED).
- 4. ANCHOR ALL ISOLATORS TO THE FLOOR, HOUSEKEEPING PAD, OR SUB-BASE USING THRU HOLES ("C") FOR CONCRETE OR ("D") FOR STEEL AS REQUIRED. USE ANCHORS MEETING THE DESIGN REQUIREMENTS SPECIFIED ON SHEET 1 OF 2. WELDING TO STEEL IS PERMITTED PROVIDING THE WELD ACHIEVES THE REQUIRED STRENGTH.
- 5. ISOLATORS ARE SHIPPED TO THE JOBSITE WITH (2) REMOVABLE SPACER SHIMS ("E") BETWEEN THE TOP PLATE AND THE HOUSING. THESE SHIMS **MUST** BE IN PLACE WHEN THE EQUIPMENT IS POSITIONED OVER THE ISOLATORS.
- 6. WITH ALL SHIMS ("E") IN PLACE, REMOVE ADJUSTING BOLT "G", AND SET ASIDE.

  KEEP THE NUT "H" SCREWED ONTO THE ADJUSTING BOLT. PLACE THE MACHINE OR

  EQUIPMENT ONTO TOP PLATE "A", ALIGNING THE EQUIPMENT MOUNTING HOLE WITH

  THE TAPPED HOLE IN THE TOP PLATE. REATTACH THE ADJUSTING BOLT BY BOLTING


  THROUGH THE EQUIPMENT MOUNTING HOLE INTO THE TAPPED HOLE OF THE ( Cont.)

REV. DESCRIPTION DATE BY


## 6. (Cont.)

ISOLATOR. TURN THE ADJUSTING BOLT UNTIL IT STARTS TO COMPRESS THE SPRING. LEAVE NUT "H" AT THE TOP OF THE ADJUSTING BOLT, LEAVING ROOM FOR ADJUSTING THE ISOLATOR PER STEP 9.

- 7. THE ADJUSTMENT PROCESS CAN ONLY BEGIN AFTER THE EQUIPMENT OR MACHINE IS AT ITS FULL OPERATING WEIGHT.
- 8. BACK OFF EACH OF THE (2) OR (4) LIMIT STOP LOCKNUTS ("F") PER ISOLATOR 1/4- TO 3/8-INCH.
- 9. ADJUST EACH ISOLATOR IN SEQUENCE BY TURNING ADJUSTING BOLT(S) "G" ONE FULL CLOCKWISE TURN AT A TIME. REPEAT THIS PROCEDURE ON ALL ISOLATORS, ONE AT A TIME. CHECK THE LIMIT STOP LOCKNUTS ("F") PERIODICALLY TO ENSURE THAT CLEARANCE BETWEEN THE WASHER AND RUBBER GROMMET IS MAINTAINED. STOP ADJUSTMENT OF AN ISOLATOR ONLY WHEN THE TOP PLATE ("A") HAS RISEN JUST ABOVE THE SHIM ("E").
- 10. REMOVE ALL SPACER SHIMS ("E").
- 11. FINE ADJUST ISOLATORS TO LEVEL EQUIPMENT.
- 12. ADJUST ALL LIMIT STOP LOCKNUTS ("F") PER ISOLATOR TO OBTAIN 3/8-INCH GAP. THE LIMIT STOP NUTS MUST BE KEPT AT THIS 3/8-INCH GAP TO ENSURE UNIFORM BOLT LOADING DURING UPLIFT (AS IN THE CASE WHEN A COOLING TOWER IS DRAINED).
- 13. INSTALLATION IS COMPLETE.

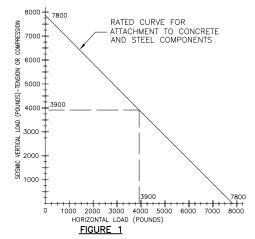

HOUSING RATED LOADS FOR CONCRETE AND STEEL M2SS-1E ISOLATORS TO BE SELECTED PER STATIC LOAD & DEFLECTION

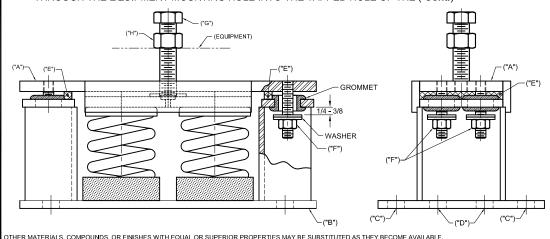

CERTIFIED FOR:		
JOB NAME:		
CUSTOMER:		
CUSTOMER P.O.:		
SALES ORDER:		

MODEL M2SS-1E-M 1650-6500 LBS.

VIBRATION ISOLATOR

WITH INTEGRAL SEISMIC RESTRAINT

AND METRIC EXTERNAL ADJUSTMENT

1 INCH DEFLECTION

		NONE SHEET:	Member	
	THE VMC GROUP The Power of Together Bloomingdale, NJ 07403 Houston, TX 77041	DRAWING NO.:		REVISION